



FMTLT61/FMAV61

Forbes Marshall Angled Tracer Line Trap/ Forbes Marshall Angled Air Vent

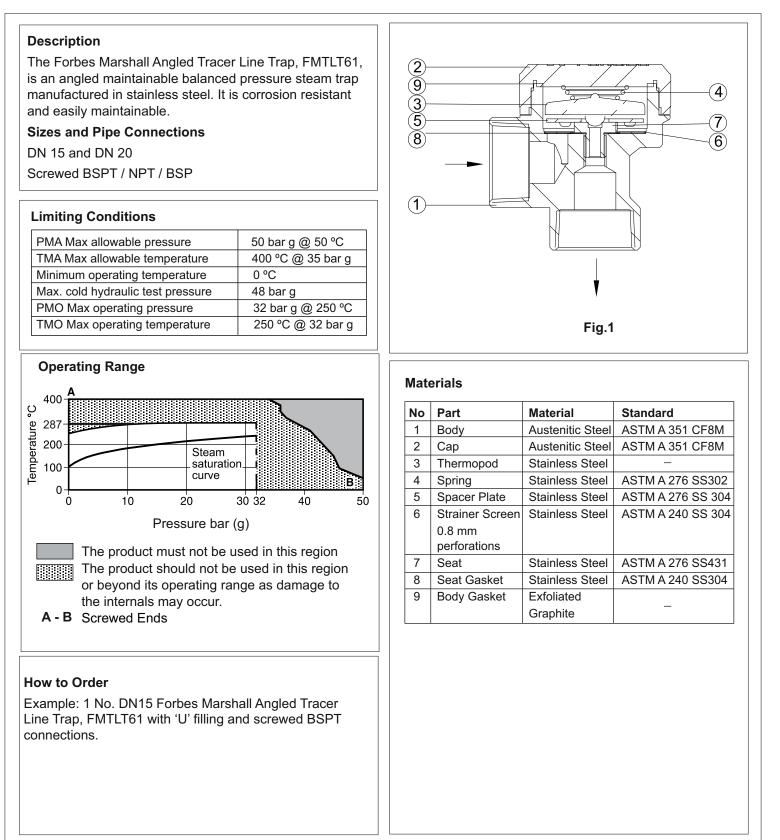

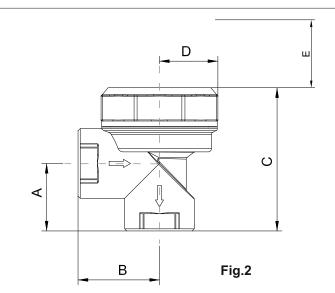

Dimensions (approx.) in mm

SIZE DN	Α	В	С	D	E	Wt. (kg.)
DN 15	31.5	38	67	29	50	0.6
DN 20	31.5	38	67	29	50	0.6

Thermopod Filling for FMTLT61

As a standard, the trap is supplied with filling "U", which will operate approximately 24°C below steam saturation temperature.

As an optional alternative the trap can be supplied with filling "C" which will operate approximately 6°C below steam saturation temperature or filling "T" which will operate approximately 12°C below steam saturation temperature.

Note: If the alternative thermopod is required this must be clearly stated on the order e.g. thermopod to have "C" or "U"

Thermopod filling for FMAV61 is "C" filling 6°C below steam saturation temperature.

Maintainance Notes

Temperature

Allow time for temperature to normalize after isolation to avoid the danger of burns and consider whether protective clothing (including safety glasses) is required.


Please refer product user manuals for detailed safety information.

Caution

The body / cover gasket contains a thin stainless steel support ring, which may cause physical injury if it is not handled and disposed carefully.

Installation of FMTLT61 (Ref. Fig. 3)

The trap is designed for installation with the thermopod in a horizontal line as the inlet and outlet at the bottom. The trap should be preceded by a short drip leg. Suitable isolation valves must be installed to allow for safe maintenance and trap replacement. Remove all protective caps prior to installation. Open isolation valves slowly until normal operating conditions area achieved. Check for leaks and correct operation.

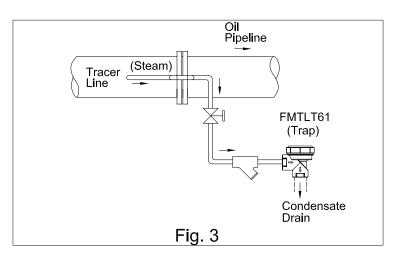


Installation of FMAV61 (Ref. Fig. 4)

1. FMTLT61 should be installed in uppermost part of system where air gets collected.


2. FMAV61 is designed for installation with thermopod in horizontal position.

3. For optimum performance FMTLT61 can be fitted on Air bottles which provide collecting space for Air, and allows temperature gradient from the steam space to an air vent.

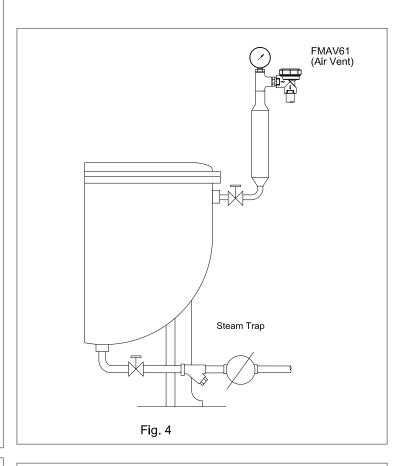

Recommended Tightening Torques

Size (DN)	Or mm	Nm
15	54.5	90-100
20	54.5	90-100

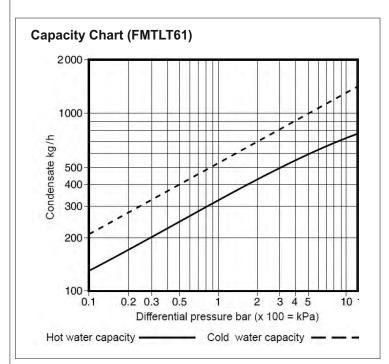

Available Spares


The spare parts available are shown in heavy outline. Parts drawn in broken line are not supplied as spares.

Thermopod and seat	"U"fill	3,7
Assembly set (state thermopod filling)	"T"fill / "C"fill	
Strainer Screen and gasket kit		6,8,9
Spring		4
Seat Gasket, Body Gasket kit		8,9
		I

How to Order Spares

Always order spares by using the description given above and stating the size and type of steam trap.

Example: 1 No. Thermopod and seat assembly set for DN 15 Forbes Marshall Angled Tracer Line Trap, FMTLT61, "U" Fill

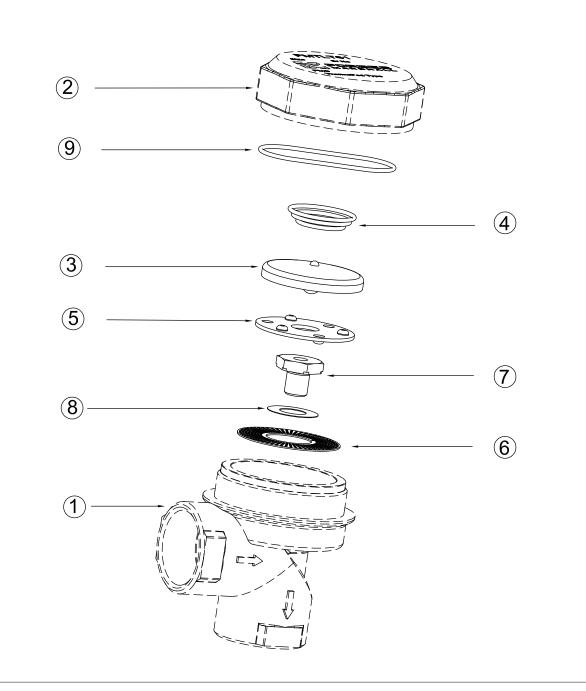



A: Forbes Marshall Pvt. Ltd. Opp. 106th Milestone, CTS 2220, Mumbai-Pune Road, Kasarwadi, Pune MH 411034 INDIA P: +91(0)20-68138555

F: +91(0)20-68138402

Forbes Marshall International Pte. Ltd. 16A, Tuas Avenue 1, #05-21, JTC Space @Tuas Singapore - 639533 P: +65 6219 3890



Scan this QR Code to view the product

CIN No: U28996PN1985PTC037806

E: ccmidc@forbesmarshall.com © All rights reserved. Any reproduction or distribution in part or as a whole without written permission of Forbes Marshall Pvt Ltd, its associate companies or its subsidiaries ("FM Group") is prohibited. Information, designs or specifications in this document are subject to change without notice. Responsibility for suitability, selection, installation, use, operation or maintenance of the product(s) rests solely with the purchaser and/or user. The contents of this document are presented for informational purposes only. FM Group disclaims liabilities or losses that may be incurred as a consequence of the use of this information. DOC# FMSS/0824/TIS-FMTLT61-FMAV61/F

DOC# FMSS/0824/TIS-FMTLT61-FMAV61/R3