

# SOFT31 (DN 15-25) Single Orifice Float Trap with SLR and/or TV

#### Description

The Forbes Marshall Single Orifice Float Trap, SOFT31, is a cast iron single orifice float trap available with an integral automatic air venting facility. It is available with horizontal or vertical connections with flow downwards. As an alternative a manual needle valve can be added and used as a steam lock release.

#### Sizes and Pipe Connection

DN 15, 20 and 25 Screwed BSPT/NPT/BSP Flange connection: #125, PN16 **Note**: Available with IBR certificate on request **Available Types** 

SOFT31 TV with Thermostatic air Vent (TV) SOFT31 with Steam Lock Release (SLR) SOFT31 with combined TV and SLR

#### **Limiting Conditions**

	Screwed Version	# 125 Flange	PN16 Flange		
PMA Maximum	13 bar g at	10.2 bar g at	13.4 bar g at		
Allowable pressure	220°C	180°C	180°C		
TMA Maximum	220°C at	180°C at	180 at		
Allowable temperature	13 bar g	10.2 bar g	13.4 bar g		
PMO Maximum 13 bar g 1		10.2 bar g	13.4 bar g		
Operating pressure					
TMO Maximum 220°C at		180°C at	180°C at		
Operating temperature	13 bar g	10.2 bar g	13.4 bar g		
Minimum Operating 0°C 0		0°C	0°C		
Temperature					
△ PMX Maximum differential pressure					
SOFT31-4.	4.5 bar g	4.5 bar g			
SOFT31-1	10 bar g	10 bar g			
SOFT31-1	13 bar g				
Cold hydraulic test pressure : 1.5 times Operating Pressure					

#### **Operating range**





#### Material

S.N	o Part	Material	Standard
1.	Cover	Cast Iron	IS 210 FG 260
2.	Cover bolts	B7	ASTM A 193
3.	Cover gasket	Asbestos free	
		synthetic fibre	
4.	Base	Cast Iron	IS 210 FG 260
5.	Main valve seat	Stainless Steel	ASTM A743
			Gr. CA40
6.	Main valve seat	Stainless Steel	ASTM A240 Type 410
	gasket		
7.	Main valve	Stainless Steel	IS-1364 Type 304
	assembly screws		
8.	Ball float & lever	Stainless Steel	ASTM A240 Type 304
9.	Air vent element	Stainless Steel	ASTM A240 Type 316
10.	SLR unit	Stainless Steel	ASTM A276 Type 410
11.	SLR unit gasket	Stainless Steel	ASTM A240 Type 410
12.	Pivot frame	Stainless Steel	ASTM A240
		Type 304	
13.	SLR Seal	Graphite	

#### Dimensions (approx.) in mm: (Screwed Version)

Size (DN)	Α	В	С	D	Е	F	Wt.(kg)
15/20	130	109	72	152	120	20	2.9
25	141	109	72	160	135	20	4.0

General Tol : ±3



(Flanged Version)

# Dimensions (approx.) in mm: (Flanged Version)

Size (DN)	Α	в	С	D	Е	Wt.(kg)
15/20	150	55	127	109	120	4.5
25	160	97	90	120	135	6.5

# General Tol : ±3

# **Capacity Chart**



#### How to Order

Example: DN15 Single Orifice Float Trap, SOFT31-T-4.5 bar g, TV, screwed BSPT

# **Available Spares**

The spare parts available are shown in the figure in a heavy outline. Parts drawn in a dotted line are not available as spares.

Main valve assembly with Float	A,B,C,D, (2 OFF) E, F
Air Vent Assembly	H, J, L, J, M, N
Steam Lock Release Unit	O,P
Cover of gasket (pack of 5 sets)	Т
Float	С
Screen(pack of 5 sets)	-



www.forbesmarshall.com

A: Forbes Marshall Pvt. Ltd. Opp. 106th Milestone, CTS 2220,

Mumbai-Pune Road, Kasarwadi, Pune MH 411034 INDIA P: +91(0)20-68138555

F: +91(0)20-68138402

#### E: ccmidc@forbesmarshall.com

© All rights reserved. Any reproduction or distribution in part or as a whole without written permission of Forbes Marshall Pvt Ltd, its associate companies or its subsidiaries ("FM Group") is prohibited. Information, designs or specifications in this document are subject to change without notice. Responsibility for suitability, selection, installation, use, operation or maintenance of the product(s) rests solely with the purchaser and/or user. The contents of this document are presented for informational purposes only. FM Group disclaims liabilities or losses that may be incurred as a consequence of the use of this information.

#### How to Fit - General

How to Fit - General With suitable isolation, repairs can be carried out with the trap on line. When reassembling it is advisable to make sure that all joint faces are clean.

# How to Fit Main Valve Assembly

- Remove cover bolts U and lift off cover and screen
- Remove complete float assembly by undoing the two screws D.
- Remove main valve seat A and replace with a new one supplied with a new gasket B.
- Fit complete new float assembly by tightening the assembly set screws D.
- Refit the cover using new gasket T.

# How to Fit Air Vent Assembly

- Remove spring clip F, element H and spacer plate M.
- · Unscrew seat, frame N assemble spacer plate, fit element and clip.
- · Align complete air vent horizontally so that the frame clears the cover.

# **Recommended Tightening Torques**

0	0 1	
Part		Torque (Nm)
Main Valve Seat (A)	18mm A/F	50/55
Main Valve Assembly Screws (D) Air Vent Seat (J)	17 mm A/F	2.5/3 50/55
Steam Lock Release Seat (S)	17mm A/F	50/55
Cover Bolts	17 mm A/F	40/55

# How to Order Spares

Always order spares using the description given in the column above, and stating the size and type of the trap.

Example : Main valve assembly for DN 15 Single Orifice Float Trap SOFT31-T-4.5



Forbes Marshall International Pte. Ltd. 16A, Tuas Avenue 1, #05-21, JTC Space @Tuas Singapore - 639533 P: +65 6219 3890

CIN No: U28996PN1985PTC037806

Codel International Krohne Marshall

Forbes Marshall Arca

Forbes Vyncke

Forbes Marshall Steam Systems